

Planet IPX SIP trunk configuration

1. Log into your Planet IPX system
2. Click on basic
- 3 . Click on trunks
4. Select VoIP Trunks
5. Click on New VOIP Trunk

Fill the form as below with the information provided by Thinktel.

Description : Name of your SIP trunk

Host : Thinktel SIP Server

Maximum channels : Channels allowed by Thinktel

Caller ID : Outgoing caller ID

Username : Provided by Thinktel

Password : Provided by Thinktel

Domain : Thinktel IP address

DID number : DID number assigned to your account

DTMF mode : RFC2833

Click save once completed.

Once information is saved, you can proceed with your Outbound and inbound routes.

- Home
- Operator
- Basic
- Extensions
- Trunks
- Outbound Routes
- Inbound Control
- Advanced
- Network Settings
- Security
- Report
- System

VoIP Trunks

VoIP Trunks

FXO/GSM Trunks

New VoIP Trunk

List of Trunks

	Provider Name	Type	Hostname/IP	Username	Options	
1	Thinktel	SIP	206.80.250.100	4389681148	Edit	Delete
2	Thinktel2	SIP	206.80.250.100		Edit	Delete

Insecure: Specifies how to handle connections with peers. Default no. You can set very|yes|no|invite|port.

Edit SIP trunk trunk-sip-4389681148

Description: Thinktel
Host: 206.80.250.100 :5060
Maximum Channels*: 2
Prefix: _____
Caller ID: _____
 Without Authentication
Username: 4389681148
Authuser: 4389681148
Password: ●●●●●●●●
 Advanced Options
Domain: 206.80.250.100 Insecure: port,invite
From User: _____ Qualify(sec): 2
DID Number: 4389681148 Transport: UDP
DTMF Mode: RFC2833 NAT: SRTP:
Auto Fax Detection:
Context: Default Language: Français
Audio Codescs
 alaw ulaw G.722 G.729 G.726 GSM Speex
Video Codes
 H.261 H.263 H.263+ H.264
Save Cancel